
Coocoonly
Wellness Products

COOCOONLY BABY CARRIER



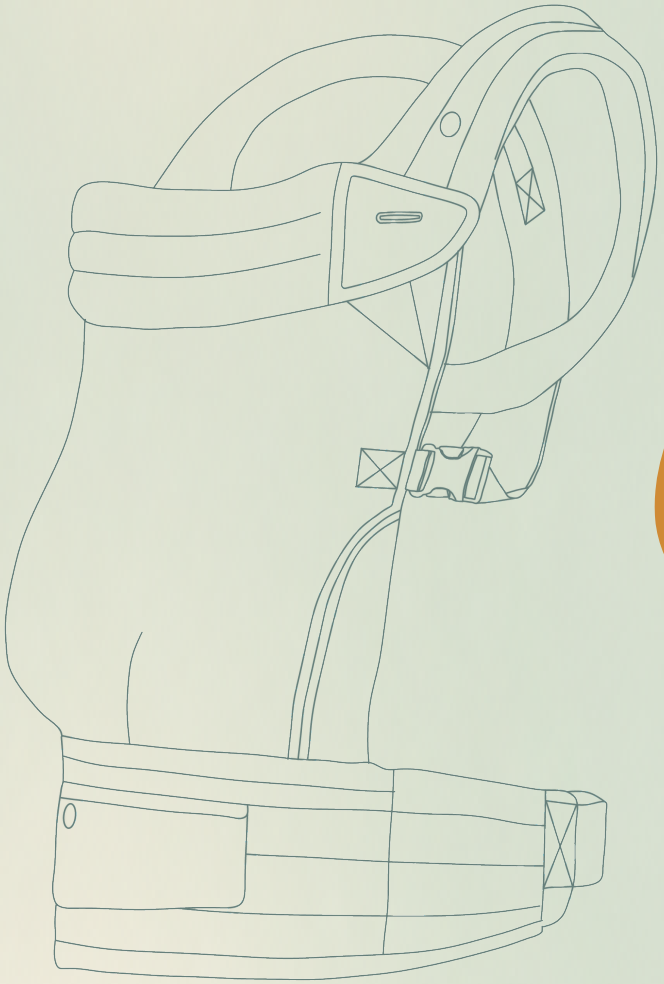

Coocoonly
Wellness Products

Safety Instruction

⚠WARNING

FALL AND SUFFOCATION HAZARD

FALL HAZARD

Babies can fall if the leg openings are too wide or if the carrier is not used properly. To avoid this:

- Adjust the leg openings to fit your baby's legs snugly.
- Check all straps and buckles before each use to ensure they are properly fastened.
- Be extra cautious when walking, bending, or leaning.
- Always bend with your knees, not your waist.
- This carrier is designed for babies weighing between 7–44 lb (3.2–20 kg).

SUFFOCATION HAZARD

Babies under 4 months are at risk of suffocation if their face is pressed tightly against your body. To prevent this:

- Do not overtighten the carrier to the point that it restricts movement or breathing.
- Make sure there's enough space for your baby's head to move freely.
- Always keep your baby's face clear and visible, without any obstructions.
- Please read all instructions carefully before using the baby carrier. Keep this manual for future reference.
- Always check that all buckles, snaps, straps, and adjustments are secure before each use.
- Inspect the carrier for any torn seams, damaged straps, or fabric before putting your baby in it.
- Make sure your child is placed correctly in the carrier, especially their leg position.

Coocoonly
Wellness Products

Safety Instruction

- Do not use the carrier for premature babies, infants under 4 months, or babies with breathing problems unless advised by a healthcare professional—they're at higher risk of suffocation.
- Avoid using the carrier if your balance or movement is affected (e.g. due to fatigue, illness, or physical activity).
- Never wear the carrier while cooking, cleaning, or near heat sources or harsh chemicals.
- Do not use the carrier while driving or riding in a car.
  Your balance may be affected while carrying your child—move carefully.
- Be extra cautious when bending forward or sideways.
- The carrier is not designed for sports or high-movement activities.
- If your baby has medical needs or was born with low birth weight, consult a healthcare provider before use.
- Stay alert to dangers around the home, like hot drinks or hot surfaces.
- Stop using the carrier if any part is damaged or missing.
- Always keep an eye on your child to ensure their mouth and nose are not blocked.
- Make sure your baby's chin is not tucked too tightly to their chest, as this can make breathing difficult and lead to suffocation.
- Make sure your child is safely and securely placed in the carrier to avoid falls.
- Keep hot liquids and dangerous objects away from the carrier to avoid accidents or spills.
- Never leave your child alone in the carrier.
- This baby carrier is designed for children up to 44 lb (20 kg) only.
- Keep the carrier out of children's reach when not in use.
  Regularly inspect the carrier for any damage or wear and tear, especially if it has been in a car.
- Only one child should be carried at a time.
- Be aware that your movements—and your child's—can affect your balance.
- Do not use the carrier for sports or intense physical activities like running, cycling, swimming, or skiing.

Safety Instruction



- As your baby becomes more active, the risk of them falling increases— stay alert.
- Always ensure your baby is securely placed in the carrier, with proper leg positioning.
- This product is not recommended for premature babies, those with breathing issues, or infants younger than 4 months, as they face a higher risk of suffocation.
- Avoid using the carrier if you're feeling weak, unbalanced, tired, or affected by any health condition.
- Never wear the carrier while cooking or cleaning—especially around heat or chemicals.
- Do not wear the carrier while driving or riding in a car.
- For your first use, try the carrier at home with someone nearby to help you.
- Always store the carrier out of reach of children when not being used.

Coocoonly

Wellness Products

Coocoonly
Wellness Products

Safety Instruction

Guidelines for Safe and Comfortable Babywearing

Tight

Your carrier should be snug enough to keep your baby held close against your body. If the carrier is too loose, your baby might slump, which could affect their breathing and cause strain on your back.

Helpful Tip: Always double-check that all straps are properly tightened and that the hook-and-loop closure on the waistband is flat, smooth, and fully secured.

In View at All Times

You should always be able to see your baby's face just by glancing down. Never let any fabric cover your baby's face — the carrier is not designed to be a closed cradle.

Helpful Tip: Make sure your baby's airflow is gentle and unobstructed. When outdoors, use a hat, shade, or light layers to protect them from the sun and wind.

Close Enough to Kiss

Your baby's head should be positioned high enough that you can easily kiss the top of it without straining. If they are not at "kiss height," lift and tighten the straps until they are.

Helpful Tip: When doing a back carry, use a mirror or ask someone to help you check your baby's positioning.

Keep Chin Off Chest

- Your baby’s chin should never press into their chest. This is a crucial safety tip because it can restrict their breathing.
- There should always be at least two fingers of space between the chin and chest to ensure proper breathing.
- In any type of carrier, make sure your baby’s head is up and their face is visible, with their nose and mouth clear of any fabric or your body.

Coocoonly
Wellness Products

Safety Instruction

Supported Back

- Your baby's spine should be naturally curved in an upright position, with their chest and tummy against you.
- The carrier should be tight enough to hug your baby close to you, preventing them from slumping down, which could hinder their breathing.
- If you gently press on their back, they should not uncurl or move closer to you, as this indicates a well-supported position.

Helpful Tips

- Pelvic tuck: Gently tilt your baby's pelvis to support the natural M-position, where their knees are higher than their bottom. This promotes healthy hip development.
- Use a soft bounce or hip shift to help them settle into the seat.
- Adjust the shoulder straps so they sit comfortably and don't cut into your neck.
- The waistband should sit at your waist, not your hips, for best support.
- Lean forward slightly when fastening your baby to distribute weight evenly.



- In back carry: Always keep at least one hand securely supporting your baby until both straps are fully secured.
- Practice new carries at home over a soft surface.
- Regularly inspect your carrier for wear, and store it folded neatly when not in use.

This information is for general guidance. Always follow all the safety, care and installation instructions provided in this manual. If you have any concerns, consult with a babywearing professional or your pediatrician.

To ensure your baby's safety, follow the "T.I.C.K.S." rules for safe babywearing every time you use the carrier:

- **Tight:** The carrier should be snug, with your baby held close to you, to ensure their back is supported. A snug fit will prevent them from slumping down, which could hinder their breathing.

- **In View at all times:** You should always be able to see your baby's face by simply glancing down. The fabric of the carrier or your clothing should never obstruct their face.

- **Close enough to kiss:** Your baby should be positioned high enough on your body so you can easily kiss the top of their head without straining.

- **Keep chin off chest:** Ensure there is at least a finger-width space between your baby's chin and their chest. A baby's chin resting on their chest can restrict their airway.

- **Supported back:** Your baby's back should be supported in a natural, curved "C" shape. When you gently press on their back, they should not uncurl or move closer to you, as this indicates they are well-supported.

Remember: if your baby falls asleep in the carrier, always ensure their head is positioned so their airway remains clear and their chin is not on their chest.

Coocoonly
Wellness Products

Baby Carrier Features

Our Baby Carrier is thoughtfully crafted to keep both you and your baby comfortable, helping you stay close and connected while keeping your hands free for everyday life.

- Made with a premium cotton and cotton–linen blend, it's soft, durable, and breathable—perfect for daily adventures indoors or out.
- Weight range: 7–44 lb (3.2–20 kg)
- This product is intended for use by adult caregivers only. Do not allow children to wear or use this carrier.
- Adjustable fit: Easily adapts to different caregiver sizes
- Fabric composition: As seen on the washing label

Key Features

- Supportive, padded neck panel for head stability
- Cushioned, adjustable waistband for lower-back comfort
- Comfortable shoulder straps—wear straight or crossed for a custom fit
- Lightweight, breathable construction for all-day wear
- Simple, ergonomic design that's easy to learn and use
- Fabrics tested and certified free from harmful substances



Carrying Options


- Front carry: baby facing inward
- Front carry: baby facing outward (for older babies with good head control)
- Back carry: baby facing inward (once your little one is strong and sitting independently)


Coocoonly
Wellness Products

Adjusting the Waist

Adjusting the Body Panel with the Internal Hook-and-Loop Closure


Your baby carrier comes with an internal hook-and-loop closure system that allows you to adjust the width of the body panel to fit your baby's size and weight. You can make the carrier wider or narrower by repositioning the hook-and-loop closure inside the waistband, as illustrated below.

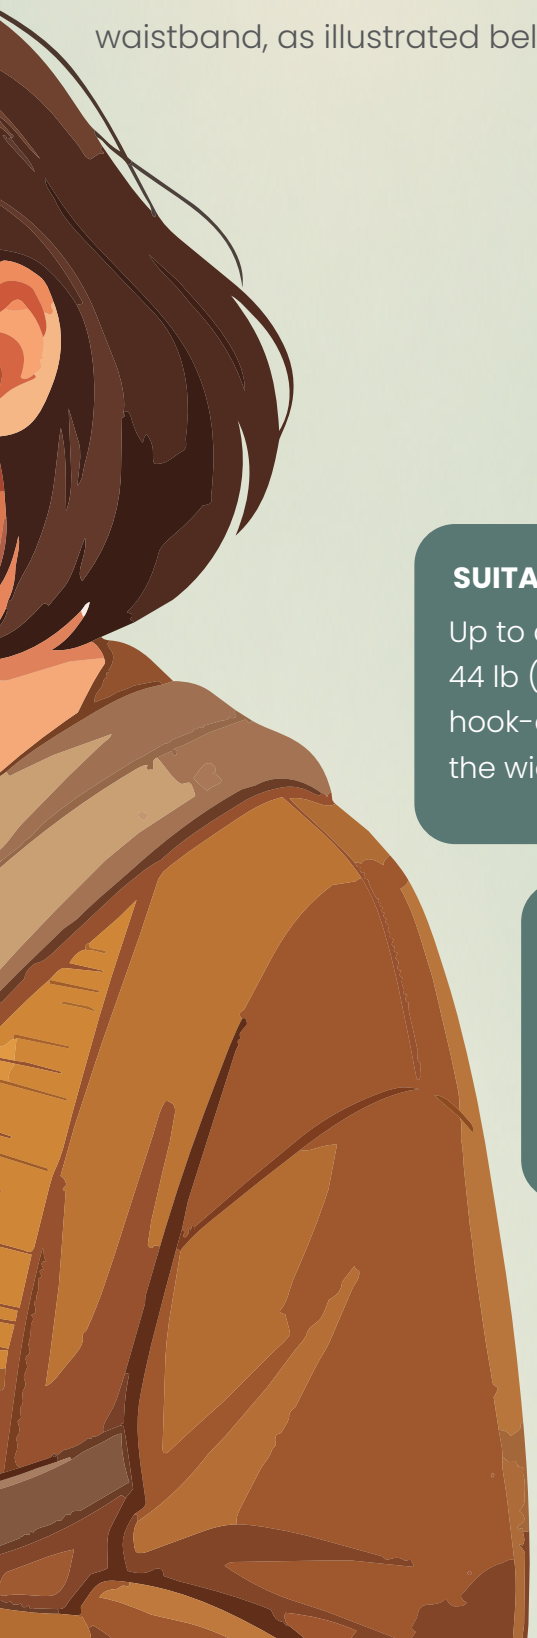


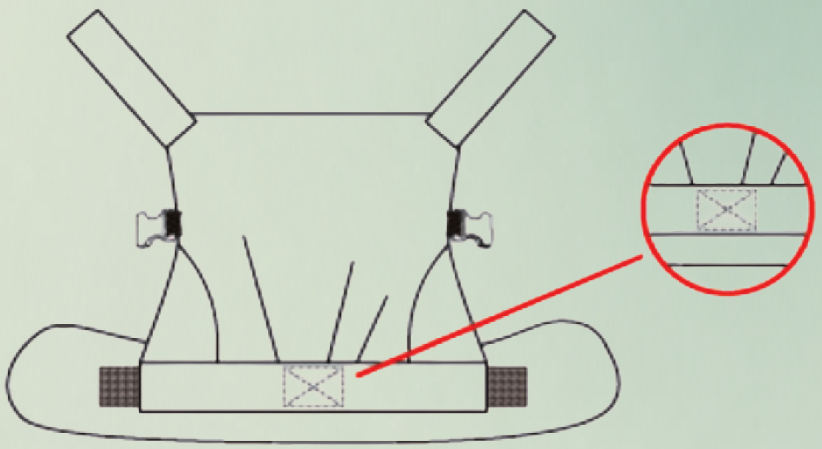

SUITABLE FROM 8 MONTHS

Up to a maximum weight of 44 lb (20 kg), set the hook-and-loop closure to the widest position

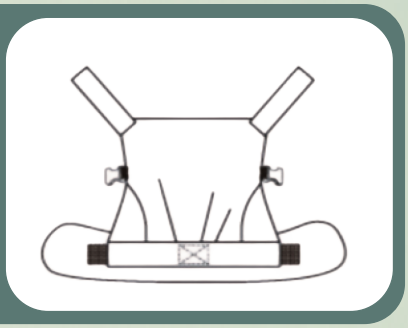

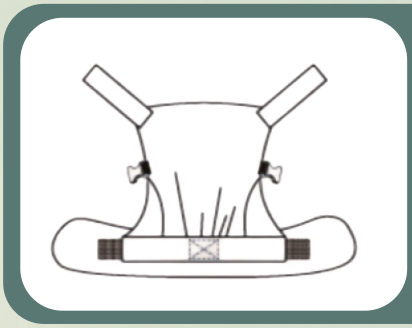


SUITABLE FROM 6 MONTHS

Up to a maximum weight of 31 lb (14 kg), set the hook-and-loop closure to the medium width

SUITABLE FROM 2 MONTHS

Up to a maximum weight of 20 lb (9 kg), set the hook-and-loop closure to the narrowest position.

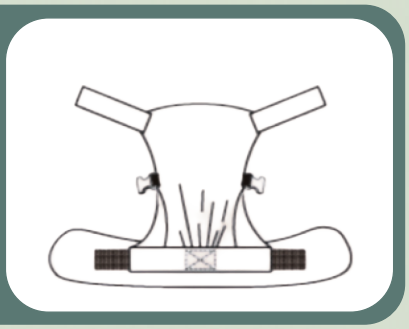


Coocoonly
Wellness Products

Right Position for Your Baby

Suitable for babies weighing between 7 lb (3.2 kg) and 44 lb (20 kg).


Correct: Knees are higher than the hips, forming an "M" shape.

Incorrect: Legs hang down straight or the carrier supports only under your baby's bottom, not from knee to knee.

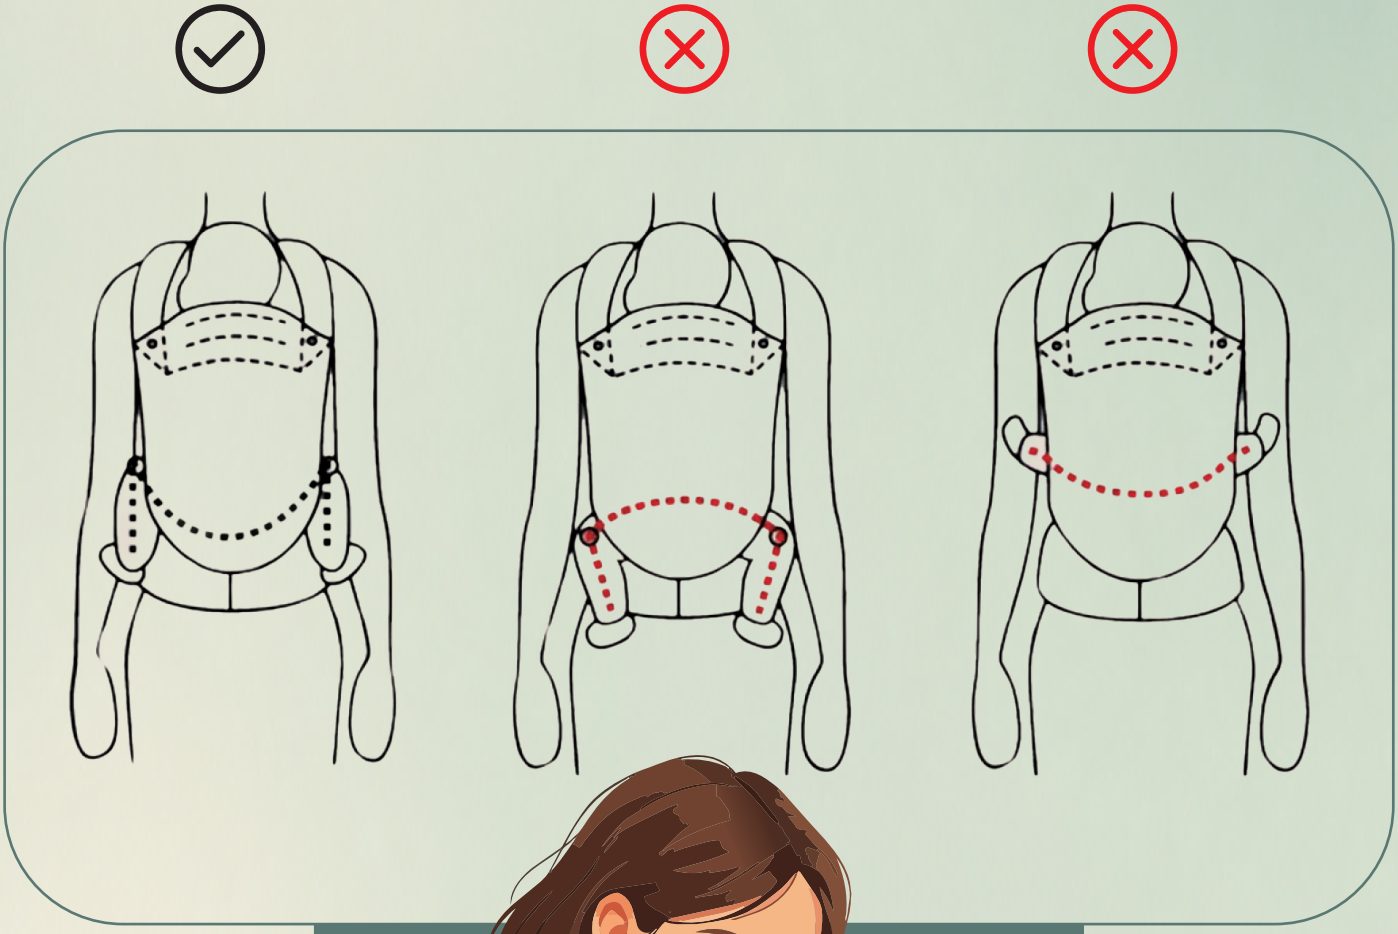





Coocoonly
Wellness Products

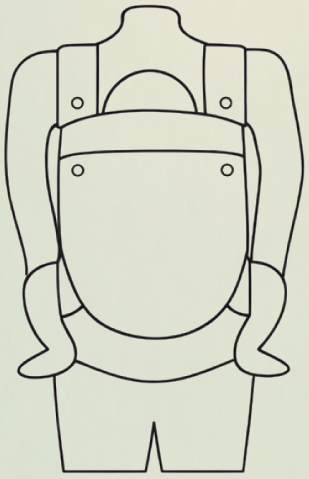

Fully Down

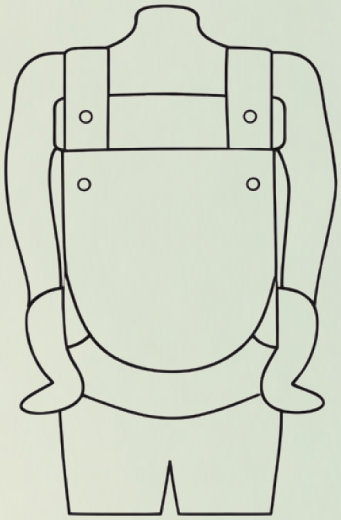

Fully Up

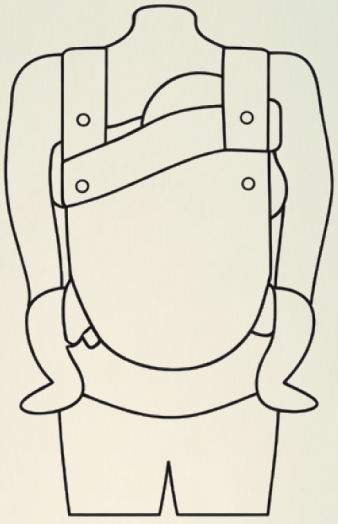

Half Up

Using Neck Support

To give your baby the right support, you can adjust the neck panel to three positions. Simply use the snaps on the shoulder straps to fold the panel down, snap it halfway, or extend it all the way up.

Fully Down

Adjust the panel down for increased visibility and freedom of movement once your baby has developed full head control.

Fully Up

Protection from the Elements
Raise the panel for privacy, shade, and protection from light wind or rain.

Half Up

When your baby needs gentle head support during rest or naps, particularly for younger infants, use the panel in this position.


Coocoonly
Wellness Products


Carry Positions

FRONT CARRY

Follow weight limits: 7–44 lb (3.2–20 kg).

Discontinue use if any component is damaged.

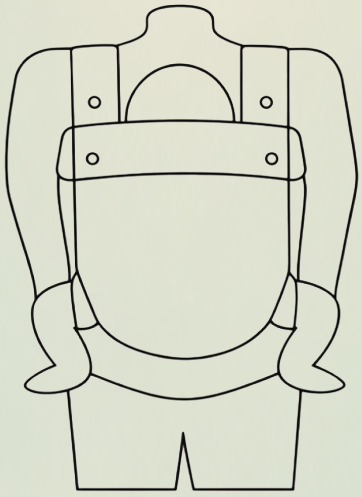

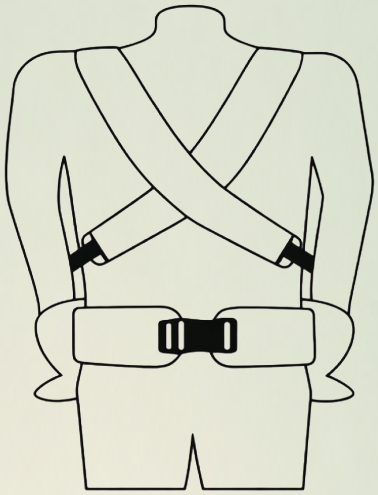



Front Carry:

Inward Facing

Suitable from:

7 lb (3.2 kg) and up

Coocoonly
Wellness Products

Front Wearing Instructions


1. Adjust the panel width. Based on your baby's age and size, adjust the inner hook-and-loop closure on the waistband.
2. Secure the waist belt. Fasten the waistband snugly around your waist, just above your hips. You should be able to slide one hand in, but it should not rotate around your waist.
3. Check the hook-and-loop closure. Make sure the entire surface is fully aligned and secured. Do not fold or overlap it.
4. Position your baby. Place your baby on your chest and pull the carrier panel up over their back.
5. Create a deep seat. Gently bounce or adjust your baby to help them settle into a deep seated position. This ensures a proper pelvic tilt and natural spine alignment.
6. Attach the first strap. With one hand supporting your baby, bring one shoulder strap over your shoulder, diagonally across your back, and clip it into the buckle on the opposite side.
7. Attach the second strap. While continuing to support your baby, repeat the process with the second shoulder strap.
8. Tighten the straps. Slightly lift your baby from under their bottom and pull the shoulder strap webbing to tighten.
9. Ensure a comfortable fit. Adjust the straps so they rest comfortably on your shoulders without cutting into your neck.
10. Check the position. Your baby should be positioned high enough to be "visible and kissable" - with their forehead at a height where you can easily lean down and kiss it.
11. Adjust if needed. If your baby is not at the correct height, lift and tighten the straps as needed.


Coocoonly
Wellness Products

Carry Positions

FRONT CARRY

Use only for infants with strong head and neck control. Limit outward-facing use to 20 minutes at a time. Monitor your baby for overstimulation or airway compromise.

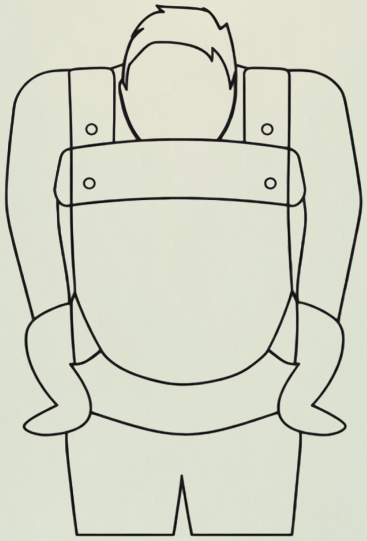

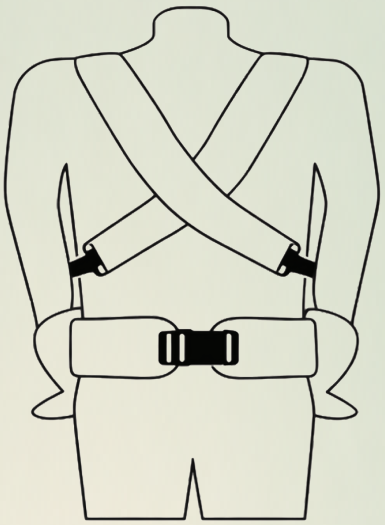



Front Carry:
World Facing
Recommended from:
6 months and good head/neck control

Coocoonly
Wellness Products

World Facing Carrying Instructions

1. Fasten the waist belt snugly around your waist, just above your hips, allowing the carrier panel to hang down in front.

2. Adjust the seat width. Use the inner hook-and-loop closure on the waistband to narrow the seat, ensuring it fits your baby's leg span without overspreading.

3. Position your baby. Place your baby against your chest, with their back against you and facing outward.

4. Attach the shoulder straps. While supporting your baby, bring the shoulder straps over your shoulders, cross them diagonally across your back, and clip them into the buckles on the opposite sides.

5. Secure and tighten. Gently bounce or lift your baby's bottom to help them settle into the carrier. Then, use the webbing to tighten the straps for a snug fit.



Important Considerations:


- Only use this position for short periods, up to a maximum of 20 minutes at a time.
- Never use this position when your baby is sleepy. Switch to an inward-facing carry to provide proper head and neck support.
- Always pay attention to your baby's cues and comfort.


Coocoonly
Wellness Products

Carry Positions

BACKPACK CARRY

Practice this carry over a soft surface until confident. Always keep at least one hand securely supporting your baby until straps are fully secured.

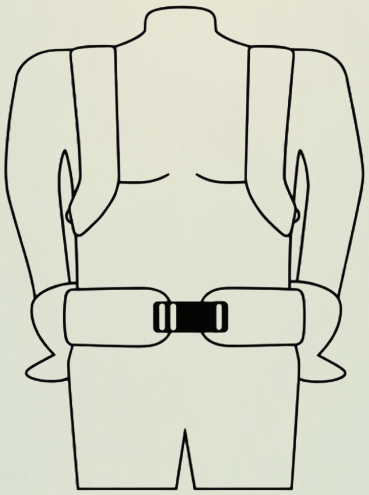

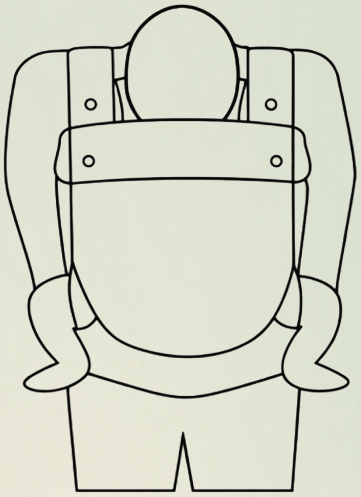



Recommended from 6+ months with strong head and sitting control
Backpack Carry – Superman Toss
Recommended for older babies/toddlers with strong head and torso control

Coocoonly
Wellness Products

Backpack Carrying Instructions

1. Adjust the carrier to fit your baby. Unfasten the waist belt and adjust the inner hook-and-loop closure to match your baby's size.
2. Fasten the waistband. Secure the waist belt snugly around your waist, just above your hips. Ensure the hook-and-loop closure is fully aligned and not folded over.
3. Prepare the shoulder straps. Buckle the left shoulder strap to the left buckle and the right strap to the right buckle, forming back-pack-style straps.
4. Place your baby on your back. Safely get your baby into a high back-carry position.
5. Pull the panel up. Pull the carrier's back panel up over your baby.
6. Put on the carrier. One arm at a time, slide through the shoulder straps as if putting on a backpack.
7. Ensure a secure fit. Lean forward slightly to keep your baby's weight centered and secure.
8. Create a deep seat. Gently bounce or shift your hips to help your baby's bottom settle into the "M" position.
9. Tighten the straps. Pull the webbing on the shoulder straps to tighten them, ensuring your baby is high, snug, and evenly supported.

Coocoonly
Wellness Products

Backpack Carrying Instructions - Superman Toss

1. Fasten the waistband snugly around your waist, just above your hips. Ensure the shoulder straps are buckled on the correct sides (left-to-left, right-to-right).

2. Lift your baby into position. Using the "Superman" lift, support your baby under their chest and hips, and gently swing them up and over your shoulder and onto your back.

3. Put on the carrier. While leaning slightly forward for balance, use one arm at a time to slip through the shoulder straps, as if putting on a backpack.

4. Create a deep seat. Gently bounce your hips to help your baby settle into a deep seat. This creates a proper M-position and improves their comfort.

5. Tighten the straps. Pull the shoulder straps to tighten them so your baby sits high.

Important:
Always keep one hand securely on your baby throughout the entire process until both straps are fully on and tightened




Coocoonly
Wellness Products

Step-by-Step Instructions

Front Carry: World Facing


A.

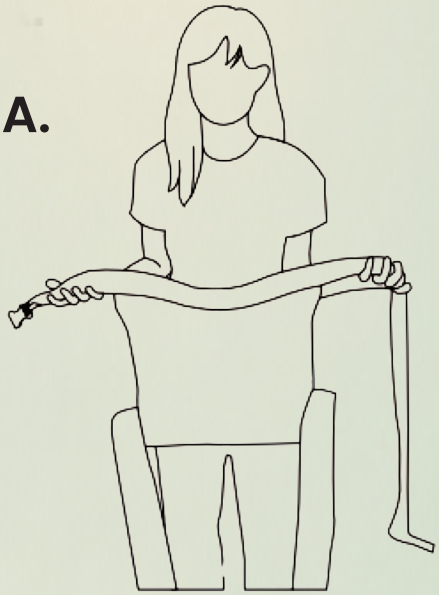

B.



C.

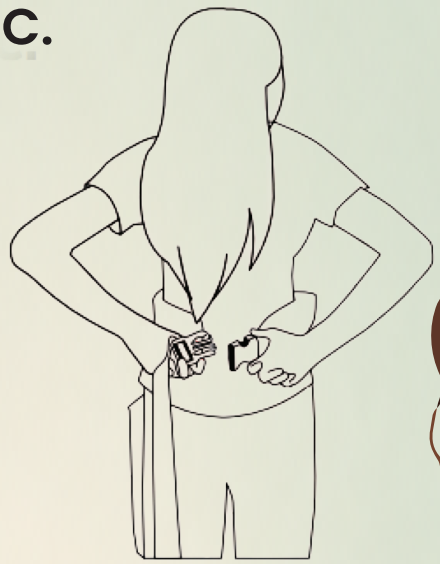

D.






E.



F.



G.

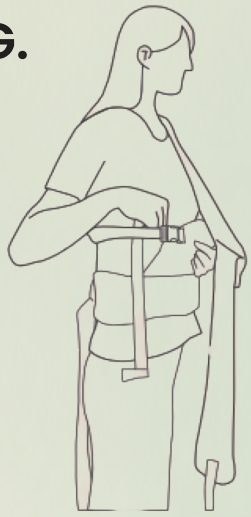

H.




I.




J.



M.

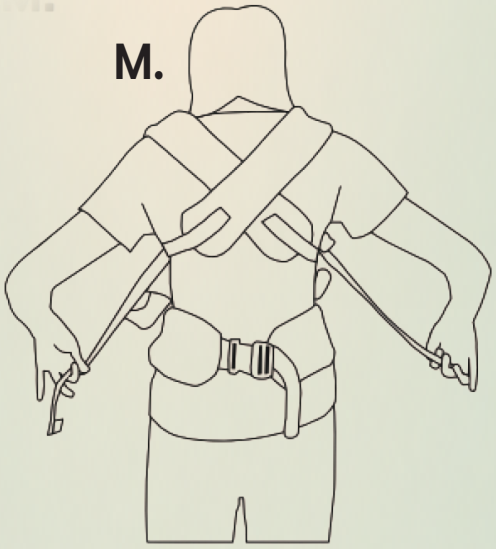

N.

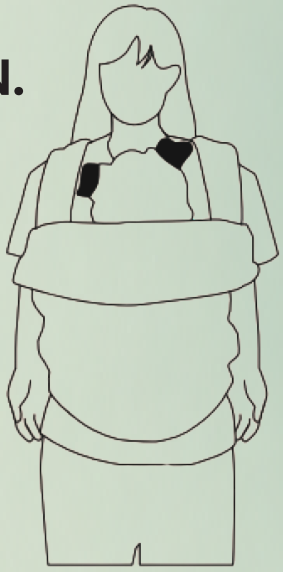

K.



L.





Coocoonly

Wellness Products

Coocoonly
Wellness Products

Adjusting Your Carrier

Waist Belt and Shoulder Straps: A Guide to Proper Fit

Waist Belt

For proper support, the waist belt should be worn snugly around your waist, just above your hip bones, rather than low on your hips. This higher placement keeps your baby close to your body at the ideal height for a safe and ergonomic carry.

Make sure the hook-and-loop closure is completely aligned and not folded or overlapped. The entire surface needs to be securely fastened for a stable and safe fit. Once tightened, roll up any extra webbing and secure it with the elastic loop for a clean look. To loosen the belt, simply pull on the plastic edge of the buckle.



Shoulder Straps

After securing the waist belt and positioning your baby, fasten the shoulder straps. To help your baby settle into a deep, natural seat, gently bounce or shift your hips while supporting them. This creates an ergonomic "M" position.

Finally, check for any slack in the shoulder straps and tighten them as needed. Your baby should sit high enough that you can easily kiss their forehead, and they should feel snug against your chest or back.

Coocoonly
Wellness Products

Adjusting Your Carrier

Safe Carrying and Removal

Safe Carrying Tips

- Always carry your baby in an upright, snug position.
- Monitor your baby constantly while they are in the carrier.
- Never sleep while you are wearing your baby.
- Only use the carrier when the user is awake, alert, and can give your full attention.
- Keep your baby's chin off their chest.
- Your baby's face and nose must remain visible and unobstructed at all times.
- Ensure your baby's back is supported in a natural 'C' curve and hips in an 'M' position.

Removing Your Baby

- Front Carry: Keep at least one hand securely supporting your baby. With your other hand, unbuckle the shoulder straps and gently lift your baby out.
- Back Carry: While leaning forward, remove one shoulder strap while keeping your other hand on your baby for support. Gently slide the carrier and baby under your arm, then carefully lift them out.

Buckle Instructions

- To Fasten: Push both buckle prongs into the buckle until you hear a clear "click."
- To Release: Press both side prongs at the same time to unbuckle.
- Always check that the buckle is securely fastened and cannot be pulled apart.

Coocoonly
Wellness Products

Carrier Care Instructions

Fabric: As seen on the washing label


Hand wash or use a machine on a gentle cycle.
Wash the item separately.

Discontinue use if straps, buckles, stitching, or fabric show signs of wear, fraying, or damage.

Do not bleach.

Do not tumble dry.

Lay the item flat to dry

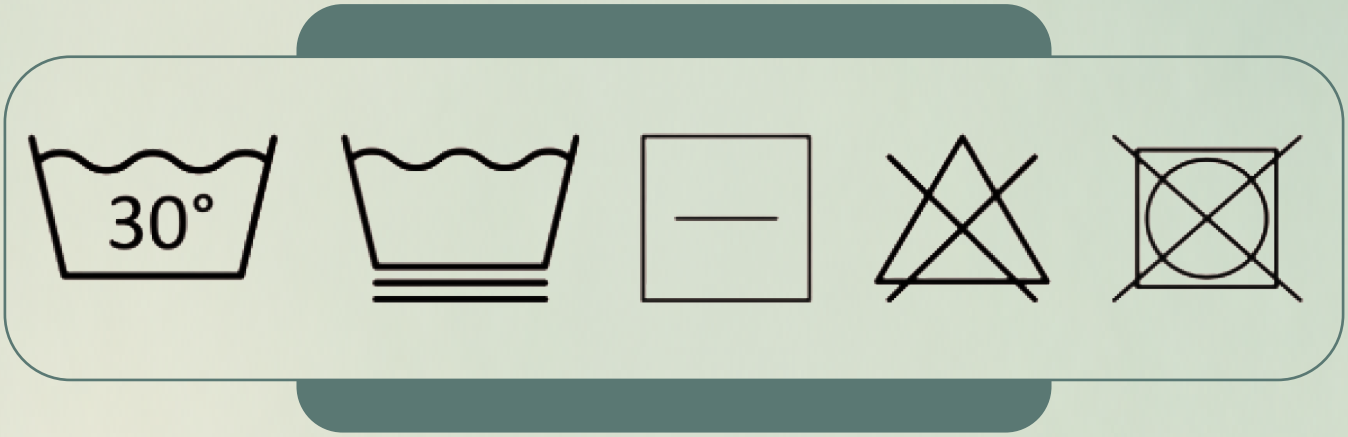



Coocoonly
Wellness Products

PRODUCT AND IMPORTER INFORMATION

Product Name: COOCOONLY Baby Carrier CBC-2512

Compliance: This product is designed to meet applicable U.S. safety standards for infant carriers. Testing and certification are conducted through accredited third-party laboratories.

Weight Range: 7–44 lb (3.2–20 kg)

Recommended Use: Based on child's weight and developmental readiness

Materials: 100% cotton

Country of Origin: China

Importer/Distributor: Coocoonly Wellness Products LLC

Address: 522 W Riverside Ave Ste N, Spokane, WA, 99201-0581, United States

Contact: support@coocoonly.com